


Oil Pattern Distance	39	Reverse Brush Drop	39	Oil Per Board	Multi ul
Forward Oil Total	16.76 mL	Reverse Oil Total	9.9 mL	Volume Oil Total	26.66 mL
Tank Configuration	Multi Tank	Tank A Conditioner	Terrain	Tank B Conditioner	Fire

	START	STOP	LOADS	MICS	SPEED	BUFFER	TANK	CROSSED	START	END	FEET	T.OIL
1	2L	2R	5	50	14	4	B	185	0.0	7.9	7.9	9250
2	5L	5R	1	50	14	4	B	31	7.9	9.8	1.9	1550
3	6L	6R	1	50	14	3	B	29	9.8	11.7	1.9	1450
4	8L	7R	1	45	14	3	B	26	11.7	13.6	1.9	1170
5	10L	9R	2	45	14	3	B	44	13.6	17.5	3.9	1980
6	12L	11R	1	40	18	3	B	18	17.5	20.0	2.5	720
7	13L	12R	1	40	18	3	B	16	20.0	22.5	2.5	640
8	2L	2R	0	40	18	3	B	0	22.5	24.0	1.5	0
9	2L	2R	0	40	22	3	B	0	24.0	35.0	11.0	0
10	2L	2R	0	40	26	3	B	0	35.0	39.0	4.0	0

	START	STOP	LOADS	MICS	SPEED	BUFFER	TANK	CROSSED	START	END	FEET	T.OIL
1	2L	2R	0	55	30	3	A	0	39.0	30.0	-9.0	0
2	13L	12R	1	55	22	3	A	16	30.0	26.9	-3.1	880
3	11L	10R	2	55	18	3	A	40	26.9	21.8	-5.1	2200
4	9L	9R	1	55	18	3	A	23	21.8	19.3	-2.5	1265
5	7L	7R	1	55	18	3	A	27	19.3	16.8	-2.5	1485
6	2L	2R	2	55	14	3	A	74	16.8	12.9	-3.9	4070
7	2L	2R	0	55	14	3	A	0	12.9	0.0	-12.9	0

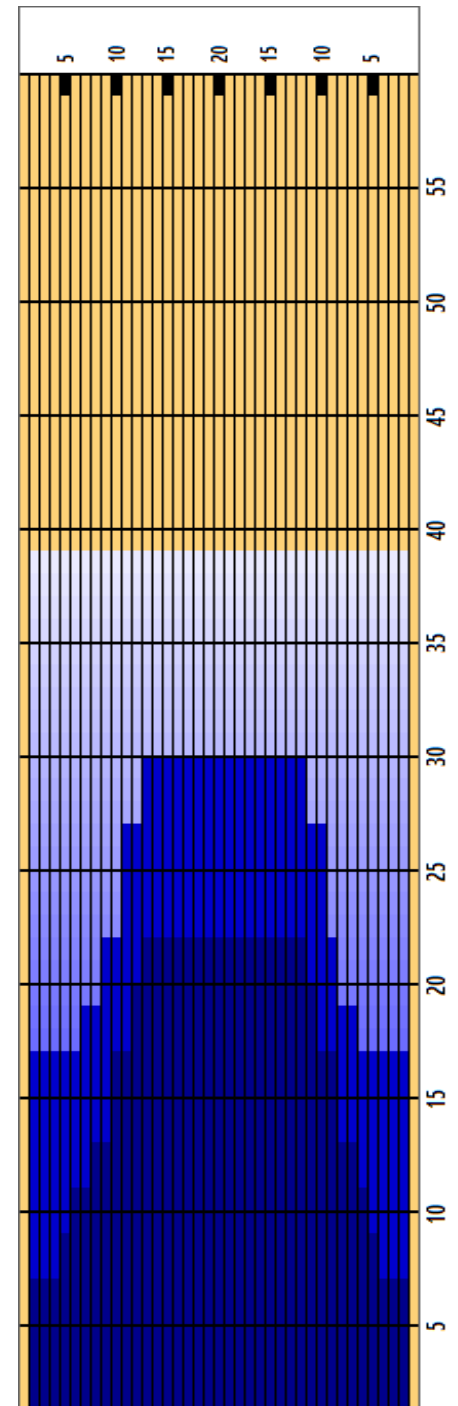

Cleaner Ratio Main Mix 5:1 Forward
 Cleaner Ratio Back End Mix 5:1 Reverse
 Cleaner Ratio Back End Distance 59 Combined
 Buffer RPM: 4 = 700 | 3 = 500 | 2 = 200 | 1 = 100



This 39 foot pattern to your ego is a lot like the element Plutonium for the world - "it can create or destroy". The alloy conditioner combination of using Fire on the forward pass, with a somewhat short forward applied oil distance, and Terrain on the reverse pass, with the oil streams hitting the lane farther back into the pattern, makes the Plutonium pattern flatter towards the end. We could say the wack

Item	3L-7L:18L-18R	8L-12L:18L-18R	13L-17L:18L-18R	18L-18R:17R-13R	18L-18R:12R-8R	18L-18R:7R-3R
Description	Outside:Middle	Middle:Middle	Inside:Middle	Middle: Inside	Middle:Middle	Middle:Outside
Track Zone Ratio	2.26	1.34	1	1	1.22	2.21

